Fine Lines Begin To Close Up this problem usually occurs in reverse images where copy has dropped out of the artwork

## **Probably Cause**

## Possible Solution

## Pad

Too hard	Use a softer pad
Roughened porous surface	Use a new pad
Cliché	
Etch depth is too deep	Make a new cliché with lower etching depth or use pause to allow ink set/drying time in cliché
Ink	
Ink too thin	Reduce the amount of thinner
Too slow; ink smears out	Use a faster thinner, or pause above cliché
Material	
Too smooth (e.g. glass)	Clean thoroughly, to aid in "catching" the ink
Other	
Pad stroke is adjusted too high, forcing ink out of etched areas	Reduce pad stroke