## Smudged Image

Fixtures are unstable

Probably Cause	Possible Solution
Pad	
Too hard	Use a softer pad
Too small in relation to the image	Use a larger pad
Prints over edges	Adjust the pad stroke and/or use fixture with more support
Cliché	
Etching is too deep	Etch a new cliché with less depth
Wrong type of cliché, may need screen	Test a new cliché with a secreen or use a different type of screen
Wrong type of screen	Test a new cliché with a different screen
Ink	
Ink is too thin	Reduce the amount of thinner
Slow drying	Use a faster drying thinner or cliché pause
Material	
Very uneven surface	Use special shaped pads or adjust pad positions
Other	

Remake